

Vero+4 Pre-Installation Checklist

PLACEMENT The Vero+4 needs an open space where the unit fits with a minimum of 2 additional inches surrounding it. The system can not be incased in order to ensure proper ventilation. Ensure you have a space **30 inches high, 20 inches wide, and 22 inches deep.**

 
POWER An outlet must be **within 6 feet** from where the system will be placed with no extension cords. The system runs at 115 V, 60 Hz, and 8 Amps.

WATER SUPPLY A cold water source must be **within 8 feet** of the system with a minimum pressure rating of 40 psi up to a maximum of 60 psi (2.75 - 6.9 bar). The Vero+4 can be connected directly to a 3/8" compression shut off valve. A John Guest Angle Stop Valve can also be used when connecting to an existing sink.


Compression Shut Off Valve



John Guest Angle Stop Valve

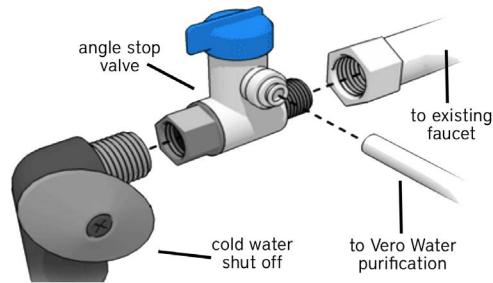

Co2 All Vero systems that operate with Sparkling water will require Co2. All clients are required to maintain the management of Co2 including the sourcing, swapping, and replacing of Co2 tanks. All Vero water units include the initial tank or in-Line Regulator. The most common size used for Vero is a 20lb Co2 tank. The estimated dimensions and sparkling water capacities of common CO2 tank sizes are listed below.

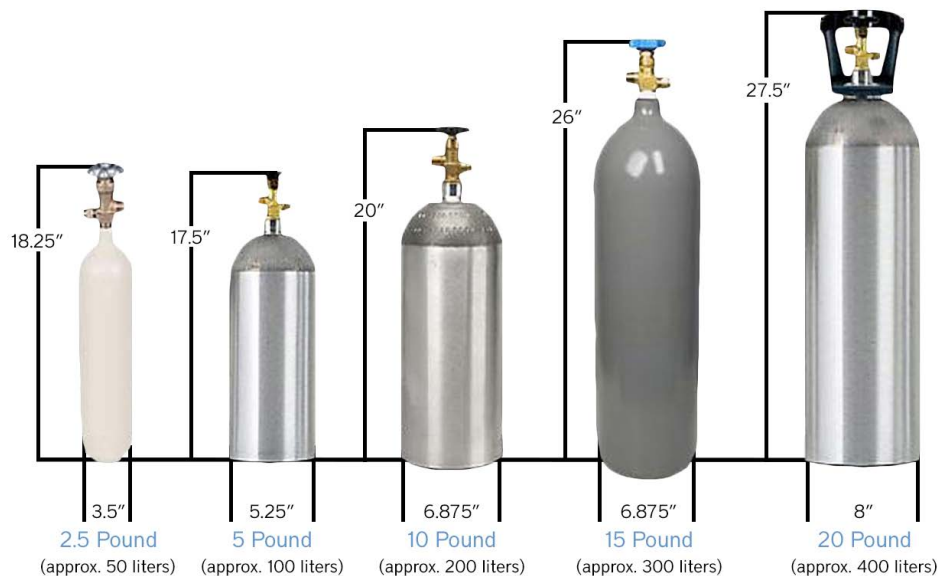 

Some popular options to purchase CO2 tanks can be found below. These services typically charge for the initial tank and then provide exchanges based on your preferred exchange method.

- [Airgas](#)
- [Praxair](#)
- [Robinson's Oxygen](#)